



# HDMI to IP Encoder Decoder kit

## User Manual

### B-4K2K-HDMI-GB-IP-TX/RX



## ■ Panel and Connectors

### B-4K2K-HDMI-GB-IP-TX Transmitter



No.	Connector	Description
1	Gigabit Ethernet	Connect to Gigabit Ethernet switch or directly to B-4K2K-HDMI-GB-IP-RX.
2	HDMI in	Connect to HDMI Source, or use HDMI-to-DVI adapter cable for DVI source.
3	Line in	Audio line in, it will be extended to the Line Out of B-4K2K-HDMI-GB-IP-RX.
4	Line out	Audio line out, it is extended from Mic. In of B-4K2K-HDMI-GB-IP-RX.
5	USB-to-PC	Connect this USB-B to PC for USB 2.0 extension.
6	DC 12V In	System power input.
7	System LED (Green) Link LED (Amber)	<b>Green Blinking/Amber Off:</b> System is starting up. <b>Green On/Amber Off:</b> System is ready, but TX/RX not connected. <b>Green On/Amber Blinking:</b> TX/RX connected, but waiting for HDMI input. <b>Green On/Amber On:</b> TX/RX connected, HDMI input is ready.
8	RS-232	Provide Serial-over-IP function. (Pin assignment: TxD-RxD-GND)
9	IR Blaster	Connect to external IR Transmitter
10	(Button 1)	Press and Hold at Power ON until <b>Green and Amber</b> LED blinking <ul style="list-style-type: none"> <li>1. Reset to the Factory default setting.</li> <li>2. Enter Setup and Firmware upgrade mode in 192.168.0.88</li> </ul>
11	(Button 2)	Short press Set to Video/Graphic mode.
	(Button 2)	Long press (3 sec.) To Enable/Disable Anti-Dither. <b>Note:</b> For some of ATI graphic card with Dithering function enabled, you may enable Anti-Dither to achieve the better video quality.

## B-4K2K-HDMI-GB-IP-RX Receiver




No.	Connector	Description
1	Gigabit Ethernet	Connect to Gigabit Ethernet switch or directly to B-4K2K-HDMI-GB-IP-TX
2	HDMI Out	This HDMI output connector supports HDMI 4K2k, 1080p output.
3	Mic. IN	Microphone Input, it will be extended to the Line Out of B-4K2K-HDMI-GB-IP-TX
4	Line OUT	Audio line out, it is extended from Line In of B-4K2K-HDMI-GB-IP-TX
5	DC 12V In	System power input.
6	System LED (Green) Link LED (Amber)	<b>Green Blinking/Amber Off:</b> System is starting up. <b>Green On/Amber Off:</b> System is ready, but TX/RX not connected. <b>Green On/Amber Blinking:</b> TX/RX connected, but waiting for HDMI input. <b>Green On/Amber On:</b> TX/RX connected, HDMI input is ready.
7	IR Receiver	Remote Universal IR receiver (optional).
8	RS-232	Provide Serial-over-IP function. (Pin assignment: TxD-RxD-GND)
9	Mode button	Short press
		Long press (3 sec.)
		Press and Hold at Power ON until <b>Green</b> LED blinking
10	Link button	Short press
		Long press (3 sec.)
		Press and Hold at Power ON until <b>Green and Amber</b> LED blinking
11	USB 1.1 Host	2 USB-A ports for USB 1.1 devices like Keyboard, Mouse, Printer, ...
12	USB 2.0 Host	2 USB-A ports for USB 2.0 devices like USB Disk, Touch Screen, ...

## ■ Configuration

The TX/RX unit built with Web page that supports Setup mode and Operation mode configuration.

### ■ Setup Mode Configuration

1. Press and Hold the unit's **[Button 1]/[Link]** button and Power ON until **Green and Amber** LED blinking then release the **[Button 1]/[Link]** button. This will force TX/RX enter Setup mode.
2. Directly connect TX or RX to PC LAN port, set PC IP to 192.168.0.1, Net Mask 255.255.0.
3. Open PC's Web Browser and enter **192.168.0.88** <Enter>
4. The Setup Mode Web page contains [System] tab with sub-tabs of [Version Information], [Update Firmware], [Utilities], and [Statistics] as the screenshot on the right:

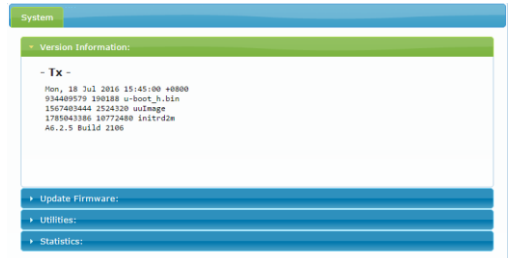

### ➤ Reset to Factory default (Setup Mode)

If the device settings lost, you can reset the device back to the factory default:

1. Enter Setup Mode Web page **[System]** ---> **[Utilities]** ---> **[Factory Default]**  
 (The Factory default setting are shown on the label that under the unit)

### ➤ Firmware Upgrade (Setup Mode)


1. Enter Setup Mode Web page **[System]** ---> **[Update Firmware]** ---> navigate to the firmware file (.bin) then click **[Upload]** to start firmware upgrade.
2. The firmware upgrade takes about 3 min., it will display "DONE Rebooting..." to indicate the unit has been upgraded and rebooted.

## ■ Operation Mode Configuration

The TX/RX can be configured in Operation Mode through Ethernet Switch or directly connected.

To enter Operation mode Web page:


1. Set PC IP 10.0.1.1, Net Mask 255.0.0.0.
2. Open Browser then enter TX/RX IP: 10.xx.xx.xx
3. The TX Operation Mode Web page is shown as the below left screenshot which contains 3 tab menus [System], [Network], [Functions]. The RX Operation Mode Web page is shown as the below right screenshot which contains 4 tab menus [System], [Video Wall], [Network], [Functions].

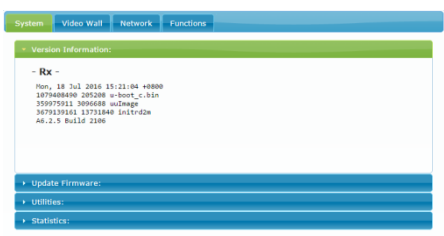

### ➤ Firmware Upgrade (Operation Mode)

It is possible to do the firmware upgrade in Operation mode for TX/RX:

1. Enter Operation Mode Web page **[System]** ---> **[Update Firmware]** ---> navigate to the firmware file (.bin) then click **[Upload]** to start firmware upgrade.

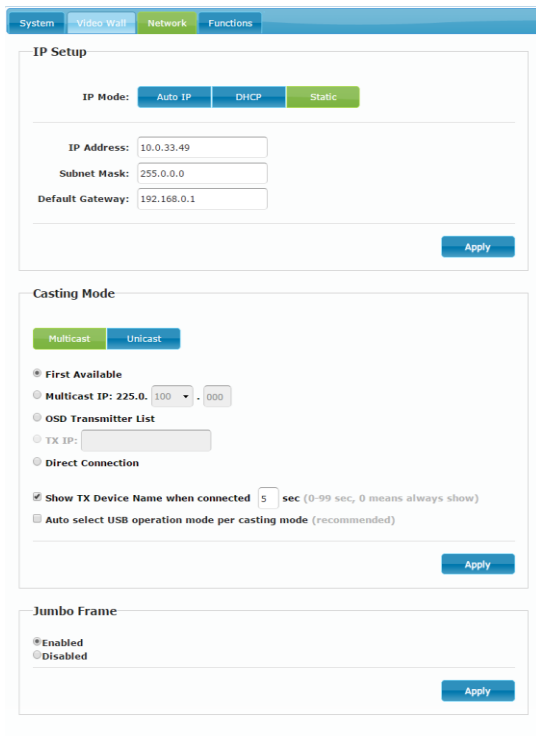

The screenshot shows the QUESTTEL web interface with three tabs: System, Video Wall, and Network. The Network tab is active, showing three sub-tabs: IP Setup, Casting Mode, and Jumbo Frame.

**IP Setup:** The IP Mode is set to Static. The IP Address is 10.0.33.49, Subnet Mask is 255.0.0.0, and Default Gateway is 192.168.0.1. There is an Apply button.

**Casting Mode:** The Multicast button is selected. Under First Available, the Multicast IP is 225.0.100.000. There is an OSD Transmitter List, a TX IP field, and a Direct Connection checkbox. A checkbox for "Show TX Device Name when connected" is checked with a value of 5 seconds. There is an "Auto select USB operation mode per casting mode (recommended)" checkbox. There is an Apply button.

**Jumbo Frame:** The Enabled checkbox is selected. There is an Apply button.

2. The firmware upgrade takes about 3 min., it will display "DONE Rebooting..." to indicate the unit has been upgraded and rebooted.

## ➤ Network Configuration

The TX/RX provides the following Network related settings:

### ➤ To change IP

Enter TX/RX Operation Mode Web page [Network] --->[IP Setup] --->select Auto IP, DHCP, Static ---> enter device IP, Subnet Mask, Default Gateway ---> [Apply].

### ➤ To change Casting Mode

The TX/RX factory default is **Multicast**. To change, enter TX/RX Operation Mode Web page [Network] ---> [Casting Mode] ---> select [Multicast] or [Unicast] ---> [Apply].

**Note:** Each TX comes with one Individual IP address and one Multicast IP address which are shown on the unit label.

### ➤ Connection Method (RX only)

There are 4 Connection Methods for **Multicast RX**: First Available, Multicast IP, OSD Transmitter List, and Direct Connection. There are 4 Connection Methods for **Unicast RX**: First available, OSD Transmitter List, TX IP and Direction Connection.

- ☐ **First Available:** the RX will connect to the first available TX.
- ☐ **Multicast IP:** 225.0.xxx.xxx: the RX will connect to the TX that is using the same Multicast IP address. ( You can setup TX Multicast IP on the TX [Network] ---> [Casting Mode])
- ☐ **OSD Transmitter List:** the RX will show up the available Transmitters for user to select.
- ☐ **TX IP:** x.x.x.x: the RX will connect to this dedicated TX only.
- ☐ **Direct Connection:** this setting enables RX to connect TX by the same subnet, same Casting Mode, Jumbo Frame will be enabled.


## ➤ To show TX Device name when connected (RX only)

This feature enable RX to pop up the TX name (or IP) when connected. Default is enabled with 5 seconds.

## ➤ To Enable/Disable Jumbo Frame

The TX/RX Jumbo Frame must be enabled for the 4K2K input and output (default Enabled). To enable or disable it, enter TX/RX Operation mode Web page ---> [Network] ---> [Jumbo Frame] ---> Enable/Disable ---> [Apply] ---> the unit will save the setting and reboot automatically.

**Note:** both TX/RX and Ethernet Switch must be all Jumbo Frame enabled to work properly for 4K2K.

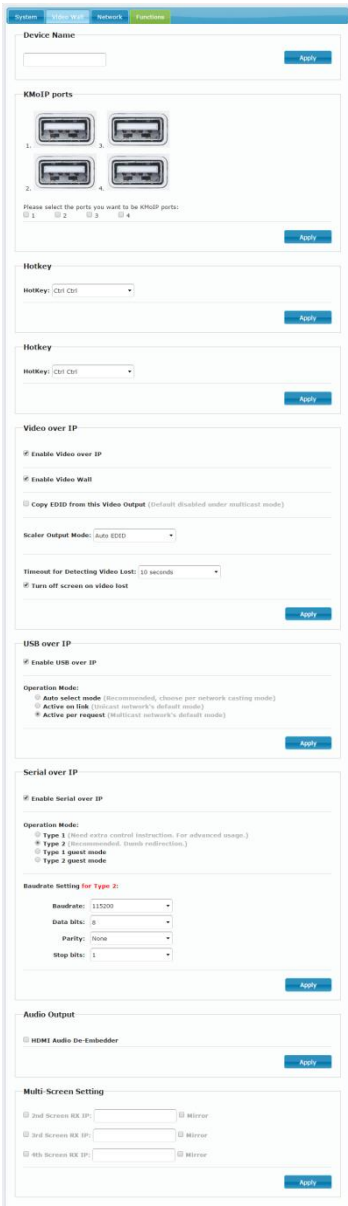

The screenshot shows the 'Functions' tab of the web interface. It includes sections for:

- Device Name:** A text input field and an 'Apply' button.
- KMoIP ports:** Four checkboxes labeled 1, 2, 3, and 4, each with a corresponding device icon. Below them is a message: 'Please select the ports you want to be KMoIP ports: 0: 1 0: 2 0: 3 0: 4' and an 'Apply' button.
- Hotkey:** Two dropdown menus for 'Hotkey: Ctrl Cnt' and an 'Apply' button.
- Video over IP:** Checkboxes for 'Enable Video over IP', 'Enable Video Wall', and 'Copy EDID from this Video Output (Default disabled under multicast mode)'. A 'Scaler Output Mode' dropdown is set to 'Auto EDID'. A 'Timeout for Detecting Video Lost: 10 seconds' dropdown is also present, along with a checkbox 'Turn off screen on video lost' and an 'Apply' button.
- USB over IP:** A checkbox 'Enable USB over IP' and an 'Apply' button.
- Serial over IP:** A checkbox 'Enable Serial over IP' and an 'Apply' button.
- Audio Output:** A checkbox 'HDMI Audio Dis-Embedder' and an 'Apply' button.
- Multi-Screen Setting:** Three rows of checkboxes for '2nd Screen RX IP', '3rd Screen RX IP', and '4th Screen RX IP', each with a 'Mirror' checkbox and an 'Apply' button.

### ➤ To change Device Name

Enter TX/RX Operation mode Web page ---> **[Functions]** ---> **[Device Name]** ---> enter name (8 characters) ---> **[Apply]** to save the device name.

### ➤ To Enable/Disable KM over IP

The system supports both USB-over-IP and KM-over-IP for USB extension. The USB-over-IP works as a Transparent 5-port USB Virtual HUB when TX is connected to PC, it is compatible with most kind of USB devices such as keyboard, mouse, Pen Drive, Touch Screen... etc. The KM-over-IP is a HID emulation built for multiple RXs to share keyboard/mouse for one PC, it takes one of 5 virtual ports. The KM-over-IP setting is different for TX and RX:

**For TX:** enter TX Operation mode Web page ---> **[Functions]** ---> **[USB over IP]** ---> **[Compatibility Mode]** ---> check/uncheck [K/M over IP] to Enable/Disable(default enabled) --->**[Apply]**.

**For RX,** enter RX Operation mode Web page ---> **[Functions]** ---> **[KMolP ports]** ---> check/uncheck 1, 2, 3, 4 to Enable/Disable ports for KM-over-IP (default all disabled) ---> **[Apply]**.

### ➤ To define Hotkey (RX only)

The RX supports Hotkey for OSD Menu. You can choose the Hotkey: enter RX Operation mode Web page ---> **[Functions]** ---> **[Hotkey]** ---> select the Hotkey of <Ctrl><Ctrl>, <Shift> <Shift>, <Alt> <Alt>, or <Scroll> <Scroll> (default Ctrl Ctrl).

### ➤ To Enable/Disable Video over IP, Video Wall

Enter TX/RX Operation mode Web page ---> **[Functions]** ---> **[Video over IP]** ---> check/uncheck [Enable Video over IP] and [Enable Video Wall]

### ➤ To Copy EDID from this Video Output (RX only)

You can assign a RX as the EDID Master: enter RX Operation mode Web page ---> **[Functions]** ---> **[Video over IP]** ---> check/uncheck [Copy EDID from this Video Output]

### ➤ To change Scaler Output Mode (RX only)

The RX supports video-scale, to adjust it: enter RX Operation mode Web page ---> **[Functions]** ---> **[Video over IP]** ---> **[Scaler Output Mode]** ---> select the options of "Auto EDID", "Pass Through", "1080p60", "1080p50", "1920x1200", "2160p30", "2160p25", "Customize"(default Auto EDID)

### ➤ To change Timeout for detecting video lost, to enable Turn off screen on video lost (RX only)

Enter RX Operation mode Web page ---> **[Functions]** ---> **[Video over**

IP] ---> [Timeout for detecting video lost] ---> select the Timeout value (**default 10 sec.**)

Enter RX Operation mode Web page ---> [Functions] ---> [Video over IP] ---> [Turn off screen on video lost] ---> check/uncheck to Enable/Disable (**default Enable**)

### ➤ To change Maximum Bit Rate, Maximum Frame Rate (TX only)

Enter TX Operation mode Web page ---> [Functions] ---> [Video over IP] ---> [Maximum Bit Rate] ---> select the options of "Best Effort", "200 Mbps", "150 Mbps", "100 Mbps", "50 Mbps", "10 Mbps" (**default Best Effort**).

Enter TX Operation mode Web page ---> [Functions] ---> [Video over IP] ---> [Maximum Frame Rate] ---> select % for the frames capture up (**default 100%**).

### ➤ To Enable/Disable USB over IP

Enter TX/RX Operation mode Web page ---> [Functions] ---> [USB over IP] ---> [Enable USB over IP] ---> check/uncheck to Enable/Disable (**default Enable**).

**Auto select mode:** Auto selection "Active on link" if unit is in Unicast, select "Active per request" if unit is in Multicast.

**Active on link:** USB over IP will be established in sharing mode when TX/RX connection established.

**Active per request:** USB over IP can be manually requested in exclusive mode, the former RX of the USB over IP connection will be stopped if the current request is succeeded.

### ➤ KM over IP Compatibility Mode setting (TX only)

Enter TX Operation mode Web page ---> [Functions] ---> [USB over IP] ---> [Compatibility Mode] ---> check/uncheck to Enable/Disable options of Mouse not responding well, and K/M over IP (**default Enable**).

### ➤ To Enable/Disable Serial over IP, and select Operation Mode

Enter TX/RX Operation mode Web page ---> [Functions] ---> [Serial over IP] ---> check/uncheck to Enable/Disable (**default Enable**).

Enter TX/RX Operation mode Web page ---> [Functions] ---> [Serial over IP] ---> [Operation Mode] ---> select options of Type 1, Type 2, Type 1 guest mode, Type 2 guest mode (**default Type 2**).

**Note:** Type 1 is mainly for Unicast application which user can dynamically link with any target RX.

Type 2 is mainly for Multicast application which TX will RS-232 link with all of connected RXs (**default**).

Type 1 guest mode is similar to type 1 but using PC to link with RX's RS-232.

Type 2 guest mode is similar to type 2 but using PC to link with RX's RS-232.

For details, please refer to "How to Use RS232 over IP" manual.

### ➤ To define RS-232 parameters for Type 2

Enter TX/RX Operation mode Web page ---> [Functions] ---> [Serial over IP] ---> [Baudrate Setting for Type 2] ---> select Baudrate, Data bits, Parity, Stop bits. (default 115200, 8-n-1)

### ➤ Audio Output (RX only)

If the input audio on TX is HDMI, you can set the Audio output on Line Out:

Enter RX Operation mode Web page ---> [Functions] ---> [Audio Output] ---> check "HDMI Audio De-Embedder" for the audio output to Line-Out. Click [Apply] to save the setting and reboot.

### ➤ Multi-Screen Setting


The system supports Multi-Screen feature which is useful for PC with multiple screens. Each TX/RX can define its associated 2<sup>nd</sup>, 3<sup>rd</sup>, 4<sup>th</sup> TX/RX IP. So, when the Main RX switches to a new TX, its associated RXs will also be switched to that new TX's associated TXs automatically.

Enter TX/RX Operation mode Web page ---> [Functions] ---> [Multi-Screen Setting] ---> then enter IP address for the associated 2<sup>nd</sup>, 3<sup>rd</sup>, 4<sup>th</sup> TX/RX IP.

There is a RX option of “**Mirror**”, when it is enabled, the associated RXs will connect to the same TX as the Main RX is connecting. This enables multiple RXs to display the same TX as a splitter.

## ➤ Video Wall Configuration (RX only)

The RX provides the following Video Wall related settings:

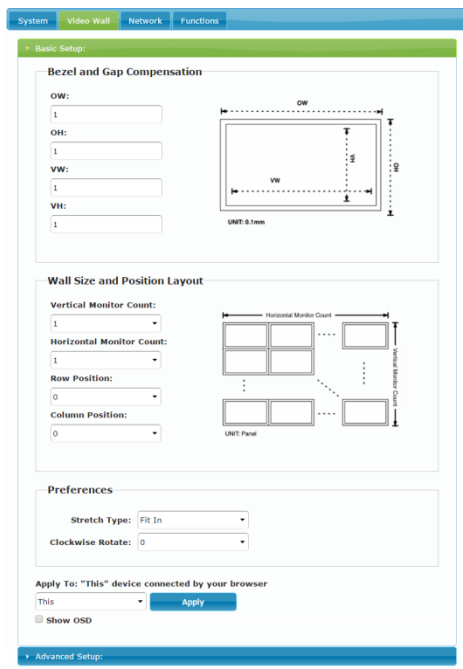

## ➤ To adjust Bezel and Gap Compensation

Enter RX Operation mode Web page ---> **[Video Wall]** ---> **[Basic Setup]** ---> Measure and enter the value for OW (Outside Width), OH (Outside Height), VW (View Width), VH (View Height) in 0.1mm unit ---> **[Apply]**.

## ➤ To define Wall Size and Position Layout

Enter RX Operation mode Web page ---> **[Video Wall]** ---> **[Basic Setup]** ---> select the value for Vertical Monitor Count, Horizontal Monitor Count, Row Position, Column Position from the drop-down menu ---> **[Apply]**.

## ➤ To define Stretch and Rotation

Enter RX Operation mode Web page ---> **[Video Wall]** ---> **[Basic Setup]** ---> **[Preferences]** ---> **[Stretch Type]** ---> select options of “Fit In” and “Stretch Out” ---> **[Apply]**  
**[Clockwise Rotate]** ---> select 0, 180, 270 rotation --> **[Apply]**

### Note:

**Fit In:** Stretch the full screen to the whole wall.

**Stretch Out:** keep picture aspect ratio and stretch out of the screen if needed.

## ➤ To Show OSD

To identify the screen, check the “Show OSD” and select the device then click **[Apply]** button.

## ➤ Video Wall Advanced Setup (RX only)

The Advanced Setup can be used for special effects which are not included in Basic Setup. There are two steps in advanced setup:

Step 1: Choose one or more target(s) to apply setup to.

Step 2: After the targets are selected, changes can be applied in Step 2.



System

Video Wall

Network

Functions

Basic Setup:

Advanced Setup:

Step 1: Choose Control Target

↖

↗

↘

↙

RO

↖

↗

↘

↙

This

☐ Show OSD

Step 2: Control Options

Reset to Basic Setup:

Reset

Stretch Type:

Fit In

Apply

Clockwise Rotate:

0

Apply

Screen Layout (Row x Column):

1

X

1

Apply

Row Position:

0

Apply

Column Position:

0

Apply

Horizontal Shift:

Left

Right

0

Apply

Vertical Shift:

Up

Down

0

Apply

Horizontal Scale Up (N pixels/column\_count):

0

Apply

Vertical Scale Up (N pixels/row\_count):

0

Apply

Console API Command:

Apply

➤ **Reset to Basic Setup:**

Reset the target(s) to the setting of "Basic Setup".

➤ **Stretch Type:**

**Fit In:** Stretch the full screen to the whole wall.

**Stretch Out:** keep picture aspect ratio and stretch out of the screen if needed.

➤ **Clockwise Rotate:**

0: No rotate

180: clockwise rotate 180 degree

270: clockwise rotate 270 degree

➤ **Screen Layout (Row x Column):**

To define the Video Wall size, select the Row and Column count from the drop-down menu.

➤ **Row Position:**

To set the Row position for the selected target RX. (The Row starting from 0)

➤ **Column Position:**

To set the Column position for the selected target RX. (The Column starting from 0)

➤ **Horizontal Shift (Left, Right):**

Horizontal shift target screen to left or right in 1 pixel unit.

➤ **Vertical Shift (Left, Right):**

Vertical shift target screen to left or right  
in 1 pixel unit.

➤ **Horizontal Scale Up**

Horizontal scale up the target screen in (1/column count) pixel.

➤ **Vertical Scale Up**

Vertical scale up the target screen in  
(1/row count) pixel.

## ■ Installation

1. The system factory default Connection Method for RX is “First Available”, and TX is in Multicast mode with its default Multicast IP which shown on the label. This means all of TXs will send packets with its default Multicast IP (225.0.xxx.xxx), and all of RXs will find the first available TX for connection. Please refer to page 5 for how to change Connection Method.
2. Use a CAT6 UTP cable (straight, EIA 568B) to directly connect TX/RX as a pair connection, or connects to IGMP enabled Gigabit Ethernet switch for the many TXs-to-many RXs installation.

**Note: Each TX comes with individual factory default Multicast IP which shown on the unit label.**

3. Connects RX HDMI-Out to screen by HDMI cable.
4. Assign a specific RX as the EDID Master. To do this, press and hold the [Mode] button of the specific RX unit and power ON until **Green** LED blinking then release the [Mode] button. Then power ON other RX units sequentially. In this step, RX's **Green** LED will blink then ON, and **Amber** LED Off to indicate it is ready and waiting for connecting with TX. (or refer to page 6 “To Copy EDID from this Video Output” to assign a specific RX as EDID Master)
5. The following start-up messages will be displayed during RX powered on:



**FW: 16-Jul-18 A6.2.5** ----> Firmware version  
**Local IP: 10.0.34.38** ----> RX's IP address  
**MAC: 0020Fxxxxxx** ----> RX's MAC address  
**Connection Method:**  
 ----> Possible messages are: “First Available”, Multicast or TX IP, “OSD Transmitter List”, “Direct Connection”.  
**Remote IP: 10.0.x.x / 225.0.x.x**  
 ----> Connecting target TX IP / Multicast IP.

6. If the HDMI input source is 4K2K then please refer to page 5 to enable TX/RX Jumbo Frame setting, and set Ethernet Switch Jumbo Frame with minimum 8K bytes to get the best video quality.
7. Attach HDMI/DVI source to the TX's HDMI-In. Then power ON the TX unit. The TX's **Green** LED will blink then ON to indicate ready and wait for connection with RX.
8. As long as TX/RX connection established, both of TX and RX Amber LED will start to blink indicating wait for video input source (Green LED is ON).
9. If you are using PC as video source, it is recommended to check if the correct screen EDID shown on PC graphic card control panel.
10. Activate video with audio source to TX, then check if all RXs are correctly displayed. In this step, both Green and Amber LED should be ON to indicate the unit is ready and video source is also ready.

## ■ USB and KM over IP installation

11. Connects TX USB-B to PC, OS will detect a Generic USB Virtual Hub Device.
12. The system can support both “USB-over-IP” and “KM-over-IP”.  
 The USB-over-IP works as a Virtual 5-port HUB when connected to TX, it is compatible with most kind of USB devices such as keyboard, mouse, Pen Drive, Touch Screen... The USB-over-IP connection can be configured in “Active on link” (Sharing) mode or in “Active per request” (Exclusive) mode (default). In “Active on link” mode, the maximum USB-over-IP connection for a TX is 5 due to the 5 ports of Virtual HUB.

The KM-over-IP means that USB port will work as HID device only for keyboard/mouse emulation, the PC don't get BIOS "Keyboard Error" if there is no real keyboard attached during boot up. It is not necessary to gain USB access right for the KM-over-IP port. The TX (PC) can be shared with multiple RXs for keyboard/mouse access in KM-over-IP mode.

13. There are 4 USB-A ports on the RX. The factory default setting for the TX is USB-over-IP enabled and KM-over-IP disabled, all 4 USB ports of RX are in USB-over-IP mode (KM-over-IP disabled).

14. There are 2 methods to gain the access right for a USB-over-IP port:

14.1 Long press (3 sec.) the RX [**Link button**].

14.2 Press "U" key to toggle during Transmitter List OSD menu.

The RX display "Requesting USB" to indicate starting USB-over-IP connection, and message of "Starting USB" will be displayed if it successfully gained the USB access right. Meanwhile, the previous USB Master unit will show an OSD message of "USB Stopping".

### ➤ RX OSD Main Menu

The RX supports OSD menu, press the RX's [**Link**] button to get the OSD Main menu: [**Hotkey Setting**] and [**Connection Method**].

Main  
 >Hotkey Setting  
 Connection Method

### ➤ RX OSD Hotkey selection Sub-Menu

From the OSD Main Menu, press [**Link**] button to move the highlight arrow to [Hotkey Setting]. Wait a few seconds, the sub-menu will show up with 4 possible selections: "Ctrl Ctrl", "Shift Shift", "Alt Alt", or "Scroll Scroll". Press [**Link**] button again to move the highlight arrow to the desired selection. The RX unit will be re-booted.

Hotkey Setting:  
 Ctrl Ctrl  
 Shift shift  
 Alt Alt  
 >Scroll Scroll

### ➤ RX OSD Connection Method Sub-Menu

From the OSD Main Menu, press [**Link**] button to move the highlight arrow to [Connection Method]. Wait a few seconds, either **Multicast** or **Unicast Connection Method** sub-menu will show up depending on the RX's Casting mode.

The Multicast RX supports 4 possible connection methods: First Available, Multicast IP, Transmitter List, and Direct Connection, as the right picture:

The **First Available** means the RX will connect to the first available TX that it finds on the network.

The **Multicast IP 225.0.100.000** means the RX will connect to the TX with the same Multicast IP.

The **OSD Transmitter List** means the RX will show up the available Transmitters for user to select when <Hotkey> <Hotkey> is pressed.

The **Direct Connection** means the RX will connect to a specific TX as a pair connection.

Connection Method:  
 >Group ID 000  
 Multicast IP 225.0.100.000  
 OSD Transmitter List  
 Direct Connection

The Unicast RX supports 3 possible connection methods: OSD Transmitter List, Dedicated TX IP, and Direct Connection, as the right picture:

Press the [**Link**] button to move the highlight arrow to the desired selection and wait a while to confirm the selection.

**Please note the Sub-Menu only provide selection, the Multicast IP or TX IP can only be changed by the Web page setting.**

Connection Method:  
 OSD Transmitter List  
 >TX IP 10.0.29.73  
 Direct Connection

### ➤ RX OSD Transmitter List

Attach a keyboard to the RX's any USB port, press <hotkey> <hotkey>. The OSD List with maximum 8 Transmitters will be shown, as the right-hand

> TX01 (1/2) <  
 \*1 : TX01      2 : TX02  
 >3 : TX03      4 : TX04  
 5 : TX05      6 : TX06  
 7 : TX07      8 : TX08

picture indicates, the top line “TX01 (1/2)” means the current connection is “TX01” and there are 2 pages and currently it’s on page 1. The TX with an asterisk (\*) mark indicates the current connected TX. You can select TX by the ↑ ↓ ← → key and <Enter>, or 1 ~ 8 key to immediately connect to that TX. Press F5 to refresh Transmitter List. Press U to request (or release) USB-over-IP. To end of OSD, press <ESC>

#### ■ **Connection Manager and Video-Wall Manager**

The system provides Windows based Connection Manager and Video-Wall Manager software for the TX/RX connection and Video-Wall management. Please refer to the Connection Manager and Video Wall Manager Guide for details.

**Read before operating equipment.**

- 1. Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 2. Power Sources** - Use supplied or equivalent UL/CSA approved low voltage DC plug-in transformer.
- 3. Outdoor Antenna Grounding** - If you connect an outside antenna or cable system to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- 4. Lightning** - Avoid installation or reconfiguration of wiring during lightning activity.
- 5. Power Lines** - Do not locate an outside antenna system near overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, refrain from touching such power lines or circuits, as contact with them might be fatal.
- 6. Overloading** - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 7. Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts, resulting in a fire or electric shock. Never spill liquid of any kind on the product.
- 8. Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 9. Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power supply cord or plug is damaged.
  - If liquid spills or objects fall into the product.
  - If the product is exposed to rain or water.
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. An improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - If the video product is dropped or the cabinet is damaged.
  - When the video product exhibits a distinct change in performance, this indicates a need for service.