

**1 Channel HD-SDI + 2 10/100  
Ethernet Over Fiber  
Transmitter and Receiver Extender**

**User Manual**

**L-1SDI/2IP-FE-TX/RX**



## Contents

<b>Chapter 1. Introduction</b> .....	<b>2</b>
1.1 Overview.....	2
1.2 Feature .....	2
1.3 Application .....	3
<b>Chapter 2. L-1SDI/2IP-FE-TX/RX Desktop Equipment</b> .....	<b>4</b>
2.1 Front Panel .....	4
2.2 Rear Panel.....	6
<b>Chapter 3. Technical Specification</b> .....	<b>8</b>
<b>Appendix1 Serial management interface (CONSOLE)</b> .....	<b>10</b>

## Chapter 1. Introduction

### 1.1 Overview

The L-1SDI/2IP-FE-TX/RX is a high performance, and reliable, 1-channel SD/HD-SDI video optical transceiver, which perform real-time, loss-free and high-quality video transmission over an optical line. Besides, L-1SDI/2IP-FE-TX/RX provides two Ethernet interfaces sharing 100M bandwidth, one bi-directional RS485 data channel, and optional audio/contact closure/RS422/RS232 data transmission, which can be widely used in TV live broadcast, high-definition video conference, high-definition video monitoring, intelligent transportation system and public security system.

### 1.2 Feature

- Comply with SMPTE-292M HD-SDI and SMPTE-259M SD-SDI standard, supports 1.485Gb/s and 270Mb/s
- L-1SDI/2IP-FE-TX: one SD/HD-SDI input (BNC), one looping SD/ HD-SDI output(BNC) and two fast Ethernet interfaces(shared 100M bandwidth, supports port-based VLAN)
- L-1SDI/2IP-FE-RX: one SD/HD-SDI output (BNC) and two fast Ethernet interfaces(shared 100M bandwidth, supports port-based VLAN)
- One auxiliary channel, which can be 1-channel bi-directional audio, or two-channel unidirectional audio, or 2-channel contact closure input/output, or 1-channel bi-directional RS422/RS232 channel
- One bi-directional RS485 channel, half duplex, up to 115.2Kb/s baud rate
- Supports 1080P@30,25,24, 29.97, 23.98、1080I@60,50,59.94、720P@60,50,30,25,24, 9.94, 29.97, 23.98 and 625i、525i format, when input is 1080P@29.97, 23.98、1080I@59.94、720P@59.94, 29.97, 23.98, the output is 1080P@30, 24、1080I@60、720P@60,30, 24 respectively
- With integrated cable equalizer

L-1SDI/2IP-FE-TX/R User manual

- Embedded ESD and surge protection circuit to prevent damage from static and thunder
- With NOP (No optical signal) alarm indications, output status indicator and input lock indicator
- With APC circuit to perform stable optical power

**1.3 Application**



## Chapter 2. L-1SDI/2IP-FE-TX/RX Desktop Equipment

### 2.1 Front Panel

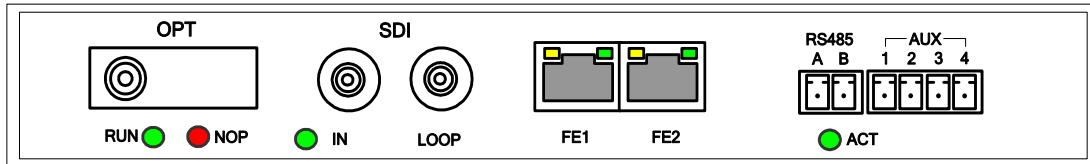


Figure 2-1-1 L-1SDI/2IP-FE-TX Front Panel

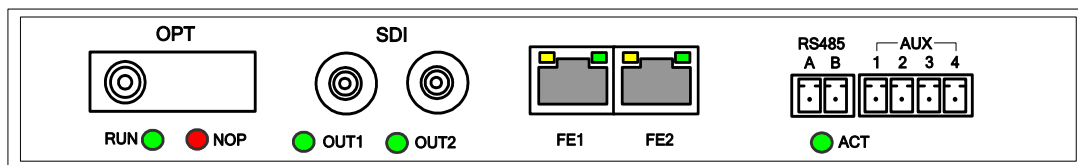


Figure 2-1-2 L-1SDI/2IP-FE-RX Front Panel

Table 2-1-1 Interfaces on L-1SDI/2IP-FE-TX/RX front Panel

Name	Description	
OPT	Optical interface, bi-directional, adopts FC connector	
SDI	IN	SD/HD-SDI input
	LOOP	Looping SD/HD-SDI output
	OUT1/2	SD/HD-SDI output1/2
FE1/FE2	Copper Fast Ethernet port, RJ45 connector, uses CAT-5 cross-over or straight-through cable.	
	LINK/ACT	FE1/FE2 Ethernet link indicator, green. ON: Normal link but no data transmit or receive; Blink: Normal link and there are data transmitting and receiving; OFF: No link or the interface is damaged
	SPD	FE1 /FE2 speed indicator, yellow. ON: operating with 100M; OFF: operating with 10M
RS485	RS485 interface, adopts PHOENIX connector	
	A	RS485 differential signal A
	B	RS485 differential signal B
AUX	One auxiliary channel, which can be 1-channel bi-directional audio, or two-channel unidirectional audio, or 2-channel contact closure input/output or 1-channel bi-directional RS422/RS232 channel. Refer to table 2-1-3 for more.  Note: if the auxiliary channel is used as the audio channel, the embedded audio channel in the HD-SDI signal will be unavailable.	

Table 2-1-2 Indicators on L-1SDI/2IP-FE-TX/RX front panel

Name	Description
NOP	Optical signal loss alarm indicator, red. ON: Optical signal loss is detected at the port. OFF: the optical port receive normal signal.
RUN	Running indicator, green. Normal blink: works normally OFF: Abnormal.
IN	The SD/HD-SDI input lock indicator, green. ON: video input normally. OFF: video input abnormally.
OUT1/2	The SD/HD-SDI output status indicator, green. ON: output normally. OFF: output abnormally.
ACT	RS485 link indicator, green. Blink: There are data transmitting and receiving; OFF: No data transmit or receive;

Table 2-1-3 AUX interface

AUX interface	No.	Name	Description
2-channel unidirectional audio output	1	AOUT1	Audio channel -1 output
	2	AOUT2	Audio channel -2 output
	3	G	Ground
	4	--	--
2-channel unidirectional audio input	1	AIN1	Audio channel -1 input
	2	AIN1	Audio channel -2 input
	3	G	Ground
	4	--	--
1-channel bi-directional audio	1	AOUT1	Audio channel output
	2	--	--
	3	G	Ground
	4	AIN1	Audio channel input
2-channel contact closure output	1	NC0	The first channel contact closure output No alarm: the contact is normally-closed (NC) Alarm: the contact is open
	2	COM0	Command contact of the first channel contact closure
	3	NC1	The second channel contact closure output No alarm: the contact is normally-closed (NC) Alarm: the contact is open

L-1SDI/2IP-FE-TX/RX User manual

	4	COM1	Command contact of the second channel contact closure
2-channel contact closure input	1	K0	The first channel contact closure input
	2	COM0	Command contact of the first channel contact closure
	3	K1	The second channel contact closure input
	4	COM1	Command contact of the second channel contact closure
1-channel bi-directional RS422/ 2-channel bi-directional RS485 AUX204(T side)	1	TXA(T/RXA1)	RS422 differential signal A output/ RS485 channel-1 differential signal A
	2	TXB(T/RXB1)	RS422 differential signal B output/ RS485 channel-1 differential signal B
	3	RXA(T/RXA2)	RS422 differential signal A input/ RS485 channel-2 differential signal A
	4	RXB(T/RXB2)	RS422 differential signal B input/ RS485 channel-2 differential signal B
1-channel bi-directional RS422/ 2-channel bi-directional RS485 AUX204(R side)	1	RXA(T/RXA1)	RS422 differential signal A input/ RS485 channel-1 differential signal A
	2	RXB(T/RXB1)	RS422 differential signal B input/ RS485 channel-1 differential signal B
	3	TXA(T/RXA2)	RS422 differential signal A output/ RS485 channel-2 differential signal A
	4	TXB(T/RXB2)	RS422 differential signal B output/ RS485 channel-2 differential signal B
1-channel bi-directional RS232	1	TX1	RS232 signal output
	2	RX1	RS232 signal input
	3	G	Ground
	4	--	--

Note: The AUX interface of L-2SDI/2IP-FE-TX and L-2SDI/2IP-FE-RX are used in pairs, e.g. if L-2SDI/2IP-FE-TX use 2-channel unidirectional audio output interface, L-2SDI/2IP-FE-RX should use 2-channel unidirectional audio input interface.

**2.2 Rear Panel**




Figure 2-2-1 L-1SDI/2IP-FE-TX/RX Rear Panel

Table 2-2-1 L-1SDI/2IP-FE-TX/RX Rear Panel

Name	Description
DC12V	DC 12V power input interface

L-1SDI/2IP-FE-TX/RX User manual

---

	Adopts AC220V/DC12V power adapter, provides 12V power supply
	Protective ground (PGND) screw, connect with the chassis.



## Chapter 3. Technical Specification

Table 3-1 Technical Specification

Item	Typical value
<b>Video Interface</b>	
Connector	BNC
Bit rate	1.485Gb/s and 270Mb/s auto adaptive
Impedance	75Ω
Return loss	>15dB
Output level	800mVp-p ± 10%
Rise and fall time (HD-SDI)	≤270ps
Rise and fall time (SD-SDI)	≤1.50ns
SD-SDI Alignment jitter (1KHz)	≤0.2UI
SD-SDI Timing jitter (10Hz)	<0.2UI
HD-SDI Alignment jitter (100KHz)	≤0.2UI
HD-SDI Timing jitter (10Hz)	<1.0UI
Standard	Comply to SMPTE-292M HD-SDI and SMPTE-259M SD-SDI standard
<b>Audio Interface (Optional)</b>	
Connector	PHOENIX connector
Impedance	Input high-impedance, output 600Ω
Quantization grade	20bits
Sample frequency	48KHz
Audio input/output voltage	2VP-P
Bandwidth	20Hz~20KHz
Total Harmonic Distortion	0.1%
Impedance	600Ω
<b>FE Interface</b>	
Connector	RJ45
Frame length	From 64 bytes to 1552/1536 bytes
Working mode	Auto-negation by default
Bit rate	10/100Mb/s
Duplex	Half/full duplex
Port VLAN	Default settings: closed. That is , all the port share the same LAN.
Flow Control	Default settings: open
Standard	IEEE802.3u 100Base-TX/ IEEE802.3 10Base-T
<b>RS485 Interface</b>	
Connector	PHOENIX connector

L-1SDI/2IP-FE-TX/RX User manual

Baud rate	0~115.2Kb/s
Bit error ratio	<10 <sup>-9</sup>
Duplex	Half-duplex
<b>CONSOLE Interface</b>	
Connector	RJ45
Baud rate	19200
bits	8
Stop bit	1
parity check	None
<b>EMU/EMU-EX Interface</b>	
Connector	RJ45
Bit rate	10Mb/s or 100Mb/s auto adaptive
<b>Power and Consumption for desktop equipment</b>	
Power supply	DC 12V
DC input voltage range	8V~14V
Power consumption	3W±10%
<b>Power and Consumption for rack mounting chassis</b>	
Power supply	AC 220V /DC-48V
DC input voltage range	-36~-72V DC
AC input voltage range	176~264V
Power consumption for each card	3W±10%
<b>Environment Requirements</b>	
Working temperature	-30~60℃
Relative Humidity	≤95%, no condensation
Storage temperature	-40~85℃
<b>Equipment dimension</b>	
Dimension of Rack mounting chassis (with rack ear)	330mm x 178mm x 482mm
Desktop equipment dimension	180mm x 123mm x 30mm

Note: The optical module is optional for users, the default is 20Km, other long distance needs to be declared when ordering.

## Appendix1 Serial management interface (CONSOLE)

Table A-1 Pin description of CONSOLE interface

Pin	Definition	Remarks
PIN1	-	Null
PIN2	-	Null
PIN3	-	Null
PIN4	-	Null
PIN5	-	Null
PIN6	GND	Ground
PIN7	RSNM-IN	Serial network management channel input
PIN8	RSNM-OUT	Serial network management channel output

The CONSOLE cable adopts RJ45 connector at one end to connect the front panel of equipment, and DB9 connector at the other end to connect PC, the diagram is as Fig. A-1-1, Fig.A-1-2 shows:



Figure A-1-1 RJ45 connector

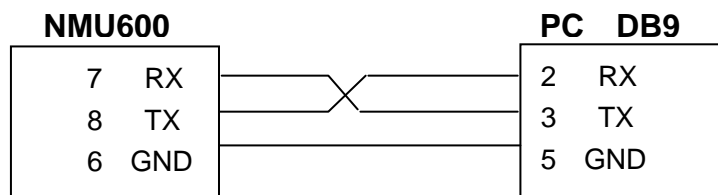


Figure A-1-2 Connection

## Read before operating equipment.

1. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
2. **Power Sources** - Use supplied or equivalent UL/CSA approved low voltage DC plug-in transformer.
3. **Outdoor Antenna Grounding** - If you connect an outside antenna or cable system to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
4. **Lightning** - Avoid installation or reconfiguration of wiring during lightning activity.
5. **Power Lines** - Do not locate an outside antenna system near overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, refrain from touching such power lines or circuits, as contact with them might be fatal.
6. **Overloading** - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
7. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts, resulting in a fire or electric shock. Never spill liquid of any kind on the product.
8. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
9. **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power supply cord or plug is damaged.
  - If liquid spills or objects fall into the product.
  - If the product is exposed to rain or water.
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. An improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - If the video product is dropped or the cabinet is damaged.
  - When the video product exhibits a distinct change in performance, this indicates a need for service.

## **WARNING!**

This unit outputs continuous invisible light, which may be harmful to the eyes; use with caution. For additional safety, plug the attached dust caps into the optical transceivers when the fiber optic cable is unplugged. Direct viewing into optical connectors should be avoided at all times!